


ShockLog Cellular GL - Impact Recorder Quick Start Guide

The ShockLog Cellular GL Module can be combined with a ShockLog 298, enabling users to track assets and monitor impact levels and other environmental conditions via the SpotSee Cloud. This module can be used with any ShockLog 298 device with firmware revision 30 or higher.

ShockLog Set Up

When a ShockLog Cellular GL Module is to be paired with a ShockLog 298, the user must select the Satellite / Cellular option on the Firmware Options page of the ShockLog setup software. This establishes the communication link between the recorder and the cellular module.

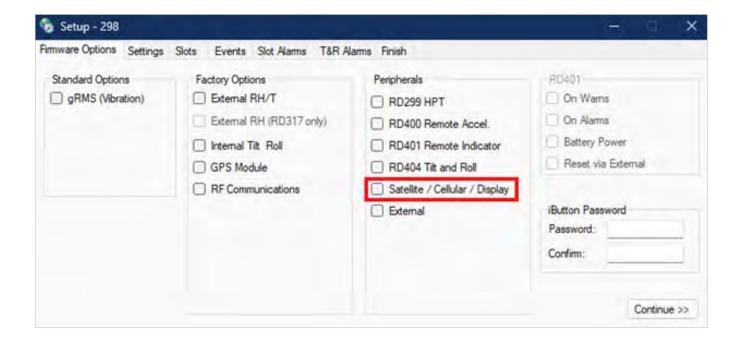





SpotSee Cloud

The SpotSee Cloud allows the user to access shipment information anytime, anywhere. By logging into track. spotsee.io users can review journey information, alarm conditions, and asset locations.

Access to Cloud Platform

Each device is shipped with a card containing its "Registration Token."

Users can either scan the QR code or follow the link to register a new device.

New User Set Up

New users will be prompted to set up a user name and password as well as to define some basic preferences.

Returning User Sign On

After a username and password have been established, users can sign in by navigating to track.spotsee.io and signing in.



