



ShockWatch 2 QR Recipient Instructions

ShockWatch® 2 QR is a single-use impact sensor designed to ship with sensitive assets to monitor for note worthy impact events that may compromise product integrity. The sensors goes red when it has experienced an impact over the selected threshold, prompting receivers to halt receipt and contact the shipper. Shippers using ShockWatch 2 care about the quality of delivered products and as such put in the appropriate measures to maintain consumer confidence.



Scan the ShockWatch 2 QR on your shipment immediately upon receipt.



1. Scan the QR code on the ShockWatch 2

Image Captured



2. Click "Continue" button on bottom of screen to open your camera.

✓ Save Scan



3. Place the ShockWatch 2 inside the black outline and adjust until the box turns yellow.

✓

✗

4. Once box is yellow, hold for 1 second to auto capture the image.

5. Click "Save Scan" to check sensor condition.

6. The condition of the ShockWatch 2 will be analyzed and temperature status will display on the final screen.

Initial QR Scan



Serial Number & Scan Instructions



Vision System Check



Condition Information

