


### MAG2000 – How to Mount it Guide

#### MAG2000

For temporary installation an extremely aggressive tape is available. For more permanent installs, the MAG 2000 can be directly screwed into a case, crate or vehicle using four predrilled screw holes located on the unit. Shockwatch can also provide a two unit mounting bracket that will allow a MAG unit to be replaced or removed when necessary.

#### For Large Shipments

Mounted horizontally will detect horizontal shocks from any direction within that plane (ignores vertical shocks)

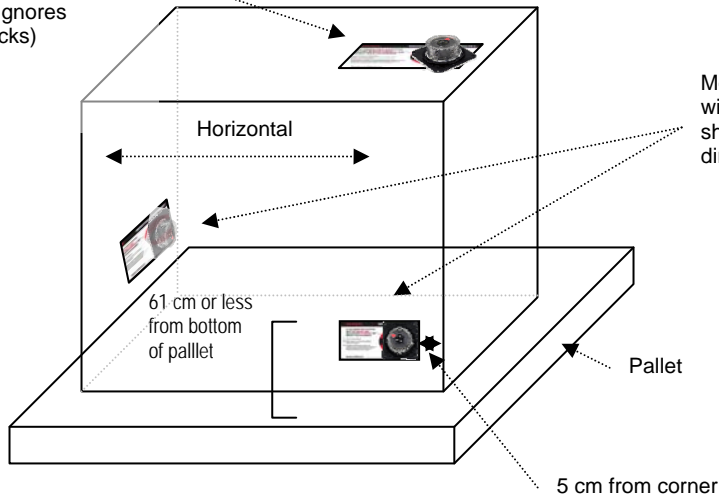

Mounted vertically will detect vertical shocks from any direction

#### For Large Crated Shipments

