


MAG 2000 - How to Mount it instructions

For temporary installation an extremely aggressive tape is attached. For more permanent installs, the MAG 2000 can be directly screwed into a case, crate or vehicle using four pre-drilled screw holes located on the unit. Shockwatch can also provide a two unit mounting bracket that will allow a MAG unit to be replaced or removed when necessary.

For Large Shipments

At least two MAG2000 required for a container. One mounted on opposite sides to monitor for impacts at either end. One unit can be mounted on the horizontal plane to monitor for horizontal impacts only.


Mounted vertically will detect vertical shocks

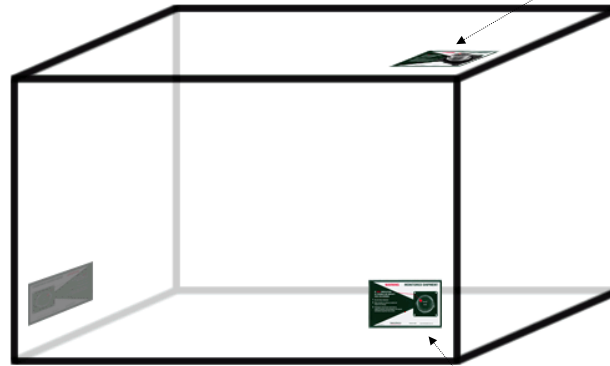

Mounted horizontally will detect horizontal shocks from any direction within that plane (ignores vertical shocks)

Mount 5 cm from corner and 61cms or less from bottom of container

For Large Crated Shipments

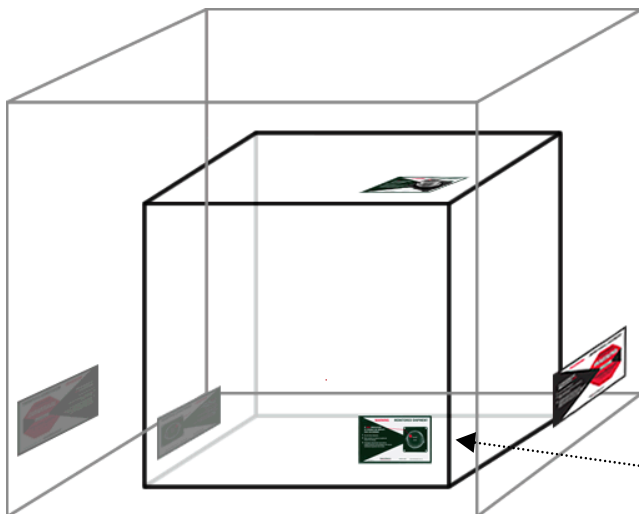

Optionally place ShockDot on opposite sides of the outer crate to add an inhibition factor since MAG units are not visible

Place MAG2000 on adjacent sides of inner crate or directly on equipment (if not covered by an inner container)