




# MAG 2000 Impact Indicator Mounting Instructions

For temporary installation an extremely aggressive tape is attached. For more permanent installs, the MAG 2000 can be directly screwed into a case, crate or vehicle using four pre-drilled screw holes located on the unit. ShockWatch can also provide a two unit mounting bracket that will allow a MAG 2000 unit to be replaced or removed when necessary.

**For Large Shipments:** At least two MAG 2000 are required for a container, mounted vertically on opposite sides to monitor for vertical shocks at either end. It is recommended that an additional unit is mounted on the horizontal plane to monitor for horizontal impacts. Mount indicators 5cm from the corner and 61cm or less from bottom of container.

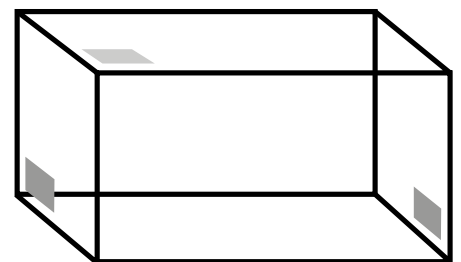

While these instructions are considered best practices, each situation may be different. If you have any further questions or would like to reorder, please either email us at [solutions@shockwatch.com.au](mailto:solutions@shockwatch.com.au) or call **1300 074 625**.



MAG 2000 with  
Companion Label