


FreezeSafe QR - Recipient Guide

FreezeSafe™ QR is a single-use freeze sensor designed to ship with sensitive medications. FreezeSafe goes from light magenta to dark magenta when exposed to colder than acceptable temperatures, signaling to recipients that the shipment of the medication should not be used. Shippers using FreezeSafe care about the quality, safety, and efficacy of medications delivered to patients and as such put in the appropriate measures to maintain critical shipping requirements.

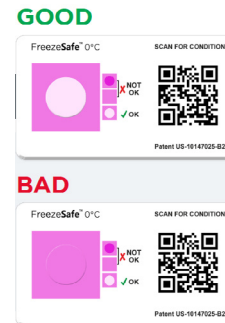

Scan the FreezeSafe in your shipment immediately upon receipt.



1. Scan the QR code on the FreezeSafe QR

Image Captured

4. Once box is yellow, hold for 1 second to auto capture the image.



2. Click "Continue" button on bottom of screen to open your camera.



5. Click "Save Scan" to check sensor condition.




3. Place the FreezeSafe QR inside the black box and adjust until the box turns yellow.




6. The condition of the FreezeSafe QR will be analyzed and temperature status will display on the final screen.

Initial QR Scan

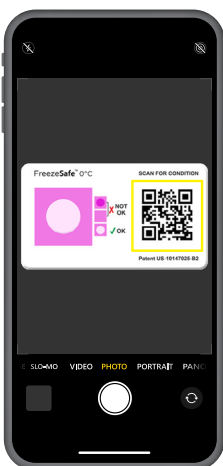


Serial Number & Scan Instructions

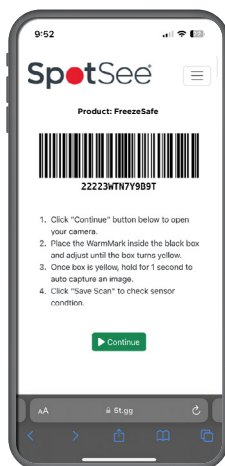

Vision System Check



Condition Information

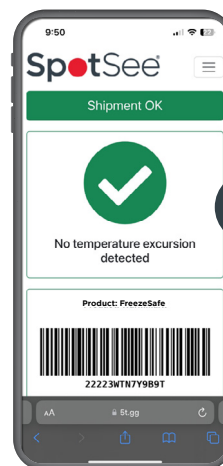

OR